Integrity Double Hung Picture
Supplemental Installation Instruction - Jamb Screws

Structural fastening is required on all stand alone picture units. Six- #8 x 3" Phillips head screws are included in this package for this purpose. You will have to remove the jamb covers to have access to pre-drilled holes.

NOTE: Large picture units, CN 68-CN 76 or 68 1/4" - 76 1/4"(1734-1937), *have four holes per jamb. Apply only three screws per jamb. Apply screws in corners and center hole location.*

Tools Needed	
Safety glasses	Drill with #2 Phillips bit
Needle nose pliers	Rubber mallet
Stiff bladed putty knife	

1. Remove the jamb covers and head jamb cover with a stiff bladed putty knife or small pry bar. Push the tool between the wood cover and vinyl and then pry out carefully. See figure 1.

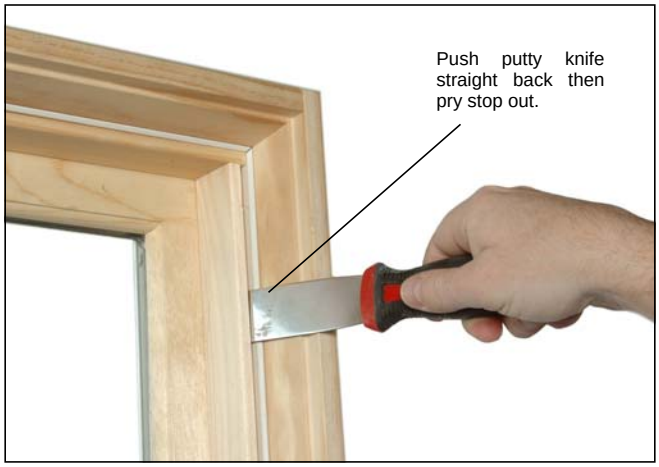

Figure 1

2. Make sure there is proper shimming behind and/or above the screw holes.

3. Drive the installation screws through the pre-drilled holes and into the rough opening framing. Drive until snug and do not over tighten. See figure 2.

Figure 2

4. Once the unit is square, flush, and fastened completely in the opening, replace the jamb covers.

5. To replace the jamb covers, insert one end in first between the flexible legs of the vinyl carriers, then slide the cover tight against the head jamb. Work your way along the cover and press into place. See figure 3.

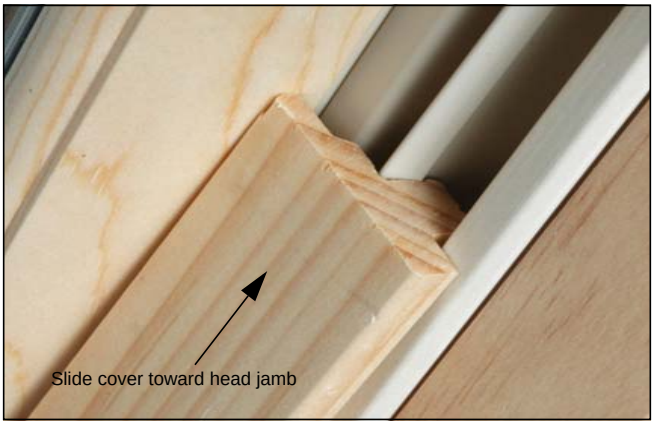

Figure 3