Wood-Ultrex Insert Double Hung
Sash Lift Installation Instruction

ABSTRACT: This instruction is intended for use only with the Wood-Ultrex Insert Double Hung product. Please read instruction in its entirety prior to installing sash lift.

Tip

Printing Tip: To ensure that the template is sized correctly, in the PDF print selection make sure you don't print to "Fit" and scaling is correct.

Standard Parts Shipped	
Sash Lift	
2-#6 x 1 1/2" Flat Head Wood Screw	
You Will Need to Supply	
Pencil	Tape measure
Awl or marker point	Drill and 3/32" drill bit
Phillips screwdriver	Tape

NOTE: Numbers listed in parentheses ( ) are metric equivalents in millimeters rounded to the nearest whole number.

ATTENTION

Specification and technical data are subject to change without notice.

Installation

1. Determine desired center(s) of sash lift across bottom rail. Mark location near the top of the flat face with tape and pencil. (If two sash lifts are to be used, we recommend measuring 9 13/16" (249) from the edge of the sash to the center line of the template.)

2. Cut out template and position on bottom rail, aligning along top edge of rail face. Mark screw with an awl or pencil.

3. Drill pilot holes at screw locations with a 3/32"(2) drill bit 3/4"-1"(22-25) deep. *Take caution when drilling.* If pilot holes are drilled too deep it will penetrate the exterior of the sash.
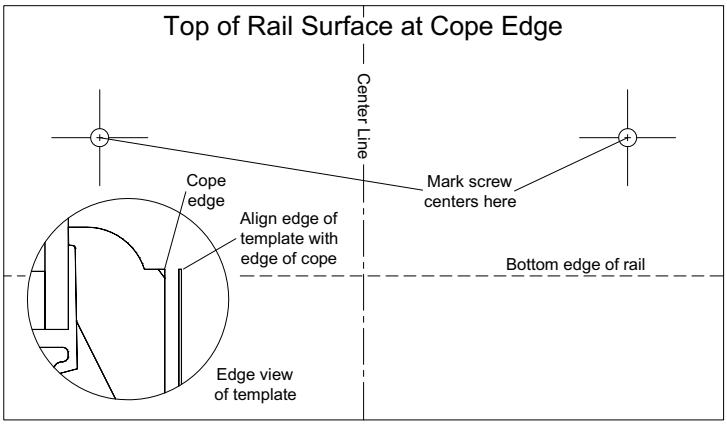
4. Position handle on rail, attach with screws using a Phillips screwdriver. Remove tape and pencil marks used to locate template.